

WARNING: Disconnect power during installation and before servicing.

IMPORTANT: Read all instructions carefully before attempting installation.

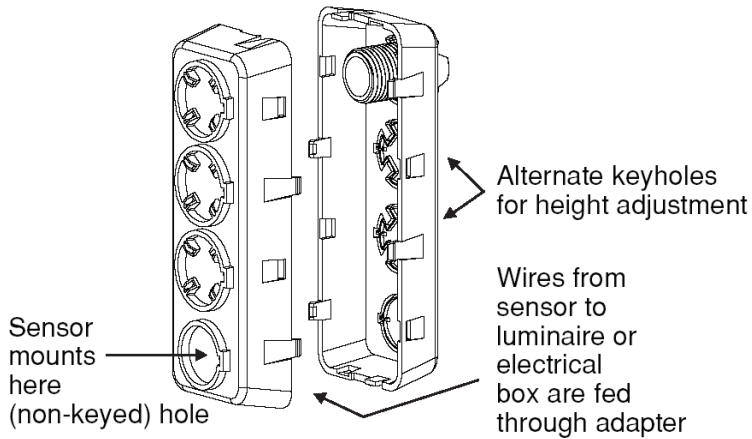



Figure 1 (sensor not shown)

INSTALLATION:

1. Occupancy sensor is already connected to ballasts, so no wiring is necessary.
2. Push excess wire back into the fixture or fold so that they fit inside extender arm.
3. Ensure proper orientation (see Figure 2).
4. Ensuring wires are not pinched, snap two halves of extender arm together.
5. Ensure that all clips are properly engaged.

Note: Figures are for illustrative purposes only. Actual occupancy sensor and/or extender arm may differ in appearance.

Correct

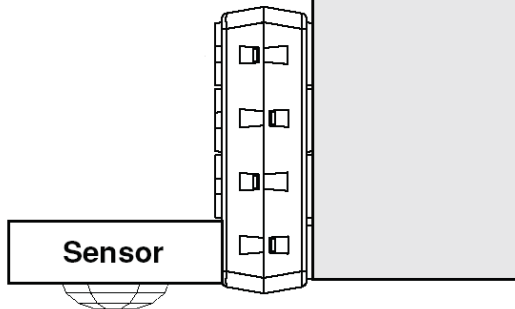

Incorrect

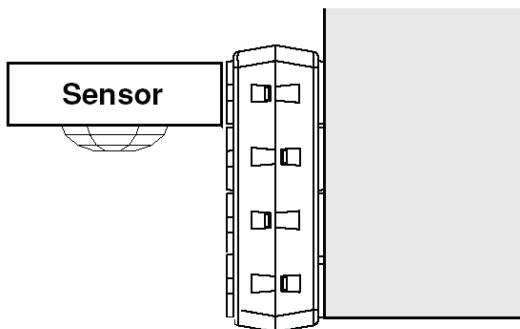


Figure 2